


## OFFSET DIVERTER INSTALLATION



The downspout coming into the top of the diverter and slides down into the diverter 1 inch and secured with screws provided.(see crimping instructions below)

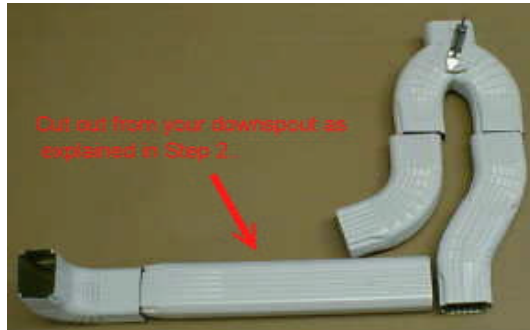

1. To assemble the Inline diverter simply slide the "B" elbow on one leg of the diverter and the zig-zag elbow and the elbow on the other leg and secure with self-taping screws provided.


2. Use the section of your existing downspout that is cut away for the diverter system and install it to the B elbow to create your desired offset.

The bottom of the zig-zag elbow needs to fit down into the existing downspout by 1 inch and secured with screws provided. (No crimping is required; the Zig-Zag comes pre-crimped.

You can alter the sides you choose to place the barrel by switching components of the diverter.



Step one:  
Using Needle nose pliers grip right hand side of downspout corner and twist counter clockwise, creating a fold.

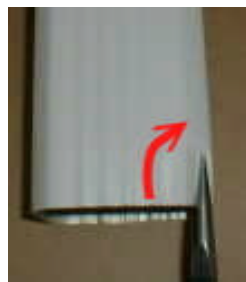

Step two:  
Grip left of fold and twist clockwise (on same corner as Step one).



Step three:  
Repeat on all four corners.



These crimps will downsize the end of downspout so it will fit into the top of the diverter.