

# SHUR FLO

## INSTALLATION INSTRUCTIONS

1. Install Shur Flo left to right with a 1/4" overlap. 1/4" cut out is on right side of panel. Next panel installed should fit over the cut out.


### 2. Fastening Shur Flo

4'6" Panel: Screw #8 x 1/2" screw at each end and one in the middle. (#8 x 1/2" mill screws are included in each carton)

10' Panel: Screw #8 x 1/2" screw at each end. Recommend fasteners approximately every 24" apart.



Shur Flo is designed to fit snugly under the drip edge against the back of the fascia. Shur Flo will perform well (most installations) without securing the panel to the fascia.

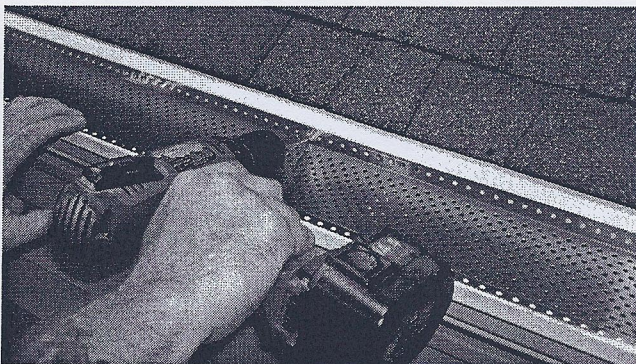

If the Shur Flo panel does not fit snugly, the panel may be secured by screwing a #10 x 1" screw through the back of the panel into the fascia. (#10 x 1" screws are included)

**IMPORTANT:** Screws through the back of Shur Flo **must** be fastened in line with the screws through the front of the panel. Screwing the #10 x 1" screws too tight may result in some distortion of the panel.

